

OPTIONS

Flush Volume

1.6 gpf (6.0 Lpf) (1.6) 1.28 gpf (4.8 Lpf) (1.28)

Power Type

Battery Hardwired (HW)

Water Efficiency

Low Consumption High Efficiency

Bypass

Dual-Filtered Fixed Bypass Diaphragm

Override

True Mechanical (TMO)

Outlet Tube

Trap Primer (TP)

Bumper

Angle Stop (YO)

Compliances & Certifications

ADA Compliant BAA Compliant BABAA Compliant UPC Certified CUPC Certified BREEAM Water Credit Green Globes Water Credit LEED V4 Water Efficiency Credit Satisfies LEED Credits UL Certified

NOTES

For product line drawings, view model-specific spec sheets.

All information contained within this document subject to change without notice.



Image for a standard SLOAN 111 SMOOTH shown

DESCRIPTION

Sloan® Exposed Sensor Water Closet Flushometer

FEATURES

- Flush volumes start as low as 1.6 gpf/6.0 Lpf
- Water conservation is aided by the ADA-compliant, non-holdopen handle, which prevents toilet from exceeding intended flush volume
- Flush accuracy is controlled by CID[™] technology, also enhancing water efficiency
- Integrity of the product is maintained with the vandalresistant stop cap
- Durability is facilitated with high copper, low zinc brass castings for dezincification resistance
- Adjustable tailpiece to accommodate different height requirements
- High chloramine resistant PERMEX synthetic rubber diaphragm with Linear Filtered Bypass and Vortex Cleansing Action
- Valve body, Cover, Tailpiece and Control Stop shall be in compliance with ASTM Alloy Classification for Semi-Red Brass
- Valve shall be in compliance to the applicable sections of ASSE 1037.

DOWNLOADS

- Sloan Exposed Installation Instructions
- Sloan Exposed (Spanish) Installation Instructions
- EBV 200 Smooth Installation Instructions
- EL 600-A Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide

SLOAN® SENSOR FLUSHOMETER SLOAN 111 SMOOTH



SLOAN® SENSOR FLUSHOMETER SLOAN 111 SMOOTH

- Tail Piece Repair and Maintenance Guide
- Sloan Flushometer Repair and Maintenance Guide
- EBV-200-A Repair and Maintenance Guide
- EL600A Smooth Side Mount Repair and Maintenance Guide
- Additional Downloads