


## **Crown® Flushometer**

# **Crown® II (DISCONTINUED)**

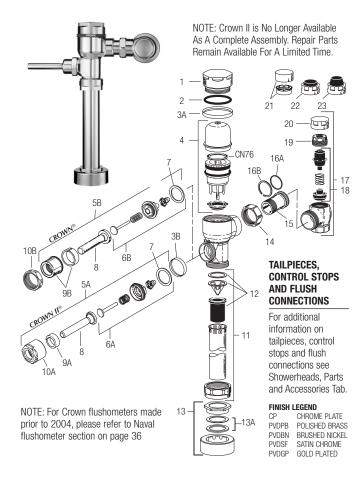

## **PARTS LIST**

Item						
No.	Code No.	Part No.	Description			
1.	0332006	CR-116	CP Cover			
2.	0332030	CR-133	Cover O-ring			
3.	0332045	CR-132-A	CP Handle and Cover Trim Ring Kit (Includes items 3A & 3B (CROWN® II ONLY)			
	0332046	CR-132-A	PVDPB Handle and Cover Trim Ring Kit (Includes items 3A $\&$ 3B) (CROWN $^{\circ}$ II ONLY)			
	0332048	CR-132-A	PVDBN Handle and Cover Trim Ring Kit (Includes items 3A & 3B) (CROWN® II ONLY)			
	0332049	CR-132-A	PVDSF Handle and Cover Trim Ring Kit (Includes items 3A & 3B) (CROWN® II ONLY)			
3A.	0332035	CR-134	Cover Trim Ring (CROWN® ONLY)			
	0332009	CR-120	PVDPB Cover Trim Ring (CROWN® II ONLY) Discontinued			
	0332032	CR-120	PVDGP Cover Trim Ring (CROWN® II ONLY) Discontinued			
	0332033	CR-120	PVDBN Cover Trim Ring (CROWN® II ONLY)Discontinued			
	0332034	CR-120	PVDSF Cover Trim Ring (CROWN® II ONLY) Discontinued			
3B.	0332005	CR-113	PVDPB Handle Trim Ring (CROWN® II ONLY)Discontinued			
	0332028	CR-113	PVDBN Handle Trim Ring (CROWN® II ONLY) Discontinued			
	0332029	CR-113	PVDSF Handle Trim Ring (CROWN® II ONLY) Discontinued			
4.	3332003	CR-1004-A	Piston Kit – 1.6 gpf (6.0 Lpf) Water Closet			
	3332013	CR-1011-A	Piston Kit – 1.28 gpf (4.8 Lpf) Water Closet			
	3332004	CR-1005-A	Piston Kit – 1.0 gpf (3.8 Lpf Urinal			
	3332005	CR-1006-A	Piston Kit – 0.5 gpf (1.9 Lpf) Urinal			
	3332017	CR-1015-A	Piston Kit – 0.25 gpf (1.0 Lpf) Urinal			
	3332016	CR-1014-A	Piston Kit – 0.125 gpf (0.5 Lpf) Urinal			
ALL D	IOTONI IZITO I	VIOLLIDE MANA	LOCAT (and Home A table to wight) AND OD 104 A INCIDE COVER			

ALL PISTON KITS INCLUDE MAIN SEAT (see item 4 table to right) AND CR-124-A INSIDE COVER ASSEMBLY AS SHOWN IN ITEM 4. PISTON KIT COMPONENTS TABLE TO THE RIGHT.

Item					
No.	Code No.	Part No.	Description		
5A.	0302353	B-30-A	ADA-Compliant Handle Assembly CP		
5B.	0302390	B-73-A	ADA-Compliant Handle Assembly CP		
6A.	3332006	CR-1007	Handle Repair Kit		
6B.	3302306	B-51-A	Handle Repair Kit		
7.	5301139	A-31	Handle Gasket – 48/pkg		
8.	0302389	B-74-A	Handle Grip Sub-Assembly ADA		
9A.	0302309	B-56	Sleeve		
9B.	0302109	B-7-A	CP Socket Assembly		
10A.	0302354	B-53	Handle Socket		
10B.	0301082	A-6	CP Handle Coupling		
11.	3393004	V-600-AA	3/4" x 9" (19 x 229 mm) Vacuum Breaker - 6/pkg		
	3393006	V-600-AA	1-1/4" x 9" (32 x 229 mm) Vacuum Breaker - 6/pkg		
	3393007	V-600-AA	1-1/2" x 9" (38 x 229 mm) Vacuum Breaker - 6/pkg		
12.	3323182	V-651-A	High Back Pressure Vacuum Breaker Repair Kit		
13.	3332000	CR-1008-A	3/4" (19 mm) Spud Coupling Assembly		
	3332001	CR-1009-A	1-1/4" (32 mm) Spud Coupling Assembly		
	3332002	CR-1010-A	1-1/2" (38 mm) Spud Coupling Assembly		
13A.	SEE SLIP J	IOINT GASKE	TS AND RINGS TABLE ON BOTTOM, PAGE 25		
14.	0308676	H-550	Stop Coupling		
15.	0308801	H-551-A	Adjustable Tailpiece (2-1/16" (52 mm) long)		
16A.	5308696	H-553	0-ring — 24/pkg		
16B.	5308381	H-552	Locking Ring – 12/pkg		
17.	0388000	H-700-A	1" Screwdriver Bak-Chek® Stop CP		
	0388001	H-700-A	3/4" Screwdriver Bak-Chek® Stop CP		
18.	3308853	H-541-ASD	Control Stop Repair Kit <sup>†</sup>		
	3308856	H-543-ASD	Control Stop Repair Kit $^{\ddagger}$ for 3/4" Stops H-600, H-640		
19.	0308612	H-622	CP Bonnet †		
	0308843	H-577	CP Bonnet ‡ — <b>DISCONTINUED</b>		
20.	3308840	H-573-A	Locking Vandal Resistant Control Stop Cap includes H-573 Stop Cap CP and H-648 Friction Ring <sup>†</sup>		
	0308848	H-582	Locking Vandal Resistant Control Stop Cap CP <sup>‡</sup>		
21.	3308651	H-651	Vandal Resistant Control Stop Cap Assembly †		
22.	3308866	H-574	Control Stop Cap w/Bumper (-YO Variation) †		
23.	3308867	H-576	Control Stop Cap w/Extended Bumper (-YG Variation) <sup>†</sup>		
24.	3388017	H-1017	Flow Control (HEU Only) (Not Shown)		
25.	5314243	CN-76	Cover Gasket (Pack of 12)		
	0305190	EL-190-A	Handle Adapter (manual only) for Optima® version		

† For use w/H-700-A 1" & 3/4" and H-600-A 1" Screwdriver Bak-Chek® Control Stops ‡ For use w/H-600-A 3/4" Screwdriver Bak-Chek® Control Stops.

CN76

## **ITEM 4. PISTON KIT COMPONENTS**

Item	Code No.	Part No.	<b>Description</b> Inside Cover Sub-Assembly		
Α.	***	CR-124-A			
B.	***	***	Piston Cover		
C.	5332095	CR-68-A	Molded Cup – 12/pkg		
D. <b>5328019</b>		SH-406	Spring – 12/pkg		
E.	***	***	Relief Valve		
F.	0307116	G-95	Relief Valve Seat		
G.	***	***	Piston Body		
Н.	***	CR-125-A	Main Seat – 6/pkg (1.0 gpf)		
gpf)			Main Seat – 6/pkg 25 gpf, 0.25 gpf and 0.5		
урі) І.	0307210	G-85	Filter O-ring		

J. 0332124 CR-169 O-ring (for use with CR-125-A main seat ONLY)\* **5308958** H-589 O-ring\* 6/pkg

<sup>\*</sup> Components are NOT interchangeable
\*\*\*\* Indicates component is NOT available separately



## **Crown® Flushometer**

## **Crown® II (DISCONTINUED)**

#### TROUBLESHOOTING GUIDE

**IMPORTANT:** The CROWN® flushometer is engineered for quiet operation. Excessive water flow creates noise, while too little water flow may not satisfy the needs of the fixture. Proper adjustment is made when plumbing fixture is cleansed after each flush without splashing water out from the lip AND a quiet flushing cycle is achieved.

Never open control stop to where the flow from the valve exceeds the flow capability of the fixture. In the event of a valve failure, the fixture must be able to accommodate a continuous flow from the valve.


**ATTENTION INSTALLERS:** With the exception of the control stop inlet, **DO NOT USE** pipe sealant or plumbing grease on any valve component or coupling! To protect the chrome or special finish of Sloan flushometers, **DO NOT USE** toothed tools to install or service these valves. Use our A-50 Super Wrench or other smooth-jawed wrench to secure couplings. Regulations for low consumption fixtures (1.6 gpf/6.0 Lpf closets and 1.0 gpf/3.8 Lpf urinals) prohibit use of higher flush volumes.

#### 1. Valve DOES NOT function.

- A. Control stop or main valve is closed. Open control stop or main valve.
- B. Handle assembly is worn. Install Sloan handle repair kit, or replace handle.
- C. Relief valve is worn and sticking in UP position. Replace piston.

### 2. Insufficient volume of water to adequately siphon fixture.

- A. Control stop not open enough. Adjust control stop for desired delivery of water.
- B. Urinal piston parts inside a closet valve. Replace piston parts with proper closet piston.
- C. Low consumption valve installed on a non-low consumption fixture. Replace with proper flushometer. Crown® flushometers are not available with flush volume higher than 1.6 gpf/6.0 Lpf.
- D. Inadequate volume or pressure at supply. Increase water pressure or supply (flow) to valve. Consult factory for assistance.

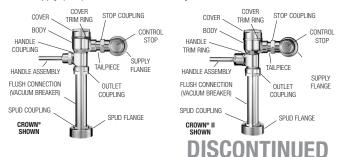

### Length of flush too short (short flushing) or valve closes off immediately.

- A. Piston assembly is not hand-tight. Screw the assembly hand-tight.
- B. Enlarged bypass orifice from corrosion or damage. Install NEW inside parts kit to correct problem and update flushometer.
- C. Urinal piston in closet flushometer. Replace piston with proper closet piston.
- D. Low consumption piston installed in non-low consumption fixture. Replace with proper flushometer. Crown® flushometers are not available with flush volume higher than 1.6 gpf (6.0 Lpf).
- E. Handle assembly worn. Install Sloan handle repair kit.

### 4. Length of flush too long (long flushing) or fails to close off.

- A. Piston is not seating properly or bypass orifice is clogged because of foreign material, or bypass orifice is clogged by an invisible gelatinous film from "over-treated" water. Disassemble the working parts and wash thoroughly. NOTE: Size of the orifice in the bypass is of utmost importance for the proper metering of water into the upper chamber of the valve. DO NOT enlarge or damage this orifice. Replace piston if cleaning does not correct problem.
- B. Line pressure has dropped and is not sufficient to force relief valve to seat. Shut off all control stops until pressure has been restored, then open them again.
- C. Main seat is fouled with debris or is worn. Clean or replace main seat.

#### 5. Leaking at handle assembly.

- A. The B-85 seal may have deteriorated. Install new B-85 seal.

  NOTE: The B-85 seal will easily slide onto the bushing if it is wet.
- B. Handle gasket has been omitted. Install A-31 handle gasket or Sloan handle repair kit.
- C. Valve handle bushing is worn. Install Sloan handle repair kit.

## **CARE AND CLEANING**

**DO NOT USE** abrasive or chemical cleaners (including chlorine bleach) to clean flushometers that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, the flushometer should be protected from any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

Piston	Water	Closet	Urinal				
Identification Chart	CR-1004-A	CR-1011-A	CR-1005-A	CR-1006-A	CR-1015-A	CR-1014-A	
Piston Color Cap Color	3332003	3332013	3332004	3332004	3332017	3332016	
	1.6 gpf (6.0 Lpf)	1.28 gpf (4.8 Lpf)	1.0 gpf (3.8 Lpf)	0.5 gpf (1.9 Lpf)	0.25 gpf (1.0 Lpf)	0.125 gpf (0.5 Lpf)	
Stem Grooves Barrel (Large Ribs or Small Ribs)							
Cap Color	Green	Deep Purple	Yellow	Red	Burgundy	Pink	
Piston Color	Green	Green	Clear	Burgundy	Burgundy	Burgundy	
Barrel	Large Ribs	Large Ribs	Small Ribs	-	-	_	
Seat Color	Green	Green	Black	Burgundy	Burgundy	Burgundy	
Grooves	2	0	1	2	1	3	

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).